KOLDTECH REFRIGERATOR AND FREEZER

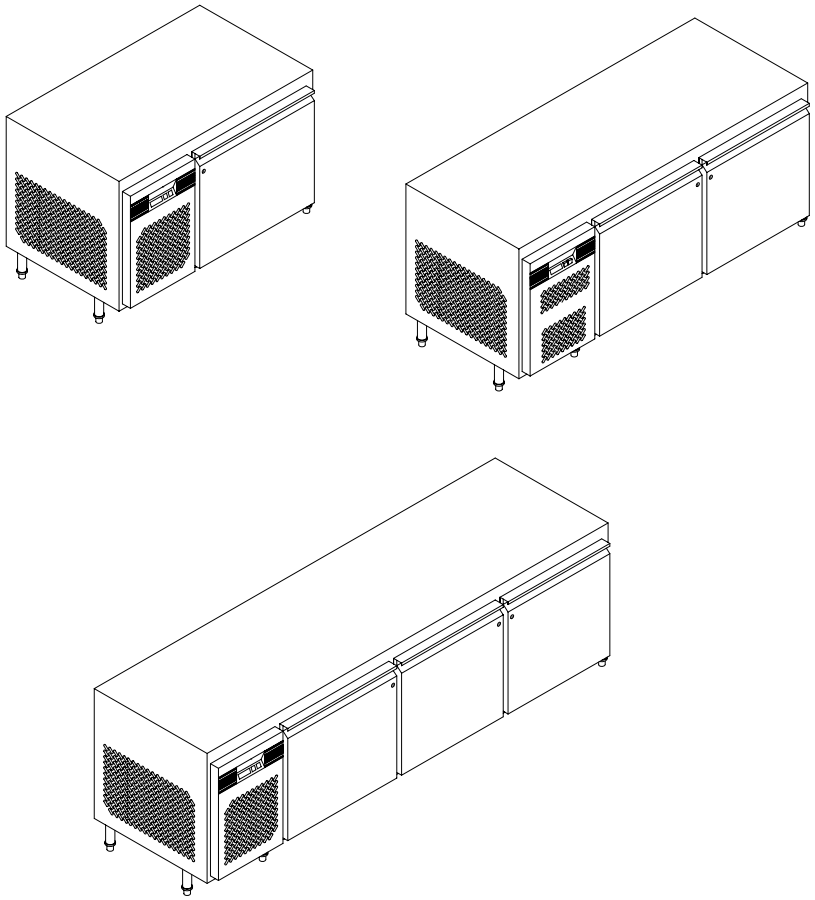

THIS MANUAL SHALL BE PERMANENTLY KEPT AT END USER

PREPARED FOR JOB NR.……OR PRODUCT SR.NR…….

General Operation and Service Manual of Undercounter

(Covering Models as shown:GN108,GN-143,GN-183,GN-188,GN-248)

OASM-008-D-06/22/11/06

CONTENTS

Topics	Description	Page
1	INTRODUCTION	3
2	INSTALLATION & STARTS UP	3
	2.1 Uncrating	3
	2.2 Handling Issue	3
	2.3 Installation	3
	2.4 Draining	4
	2.5 Ventilation	4
	2.6 Electrical Preparation	4
	2.7 Starting	4
	2.8 Product Loading	4
	2.9 Machine Performance	4
	2.10 Defrosting	4
3	PRODUCT CLEANING/Tips	4 / LAST
4	MAINTENANCE SCHDULE	5

Topics	Description	Page
5	*TEMPERATURE SETTING*	*6*
	5.1 Temperature Settings, *5.2 Controller and Parameter*	*7* *LAST*
6	ASSEMBLY DRAWING	8
7	RECOMMENDED PARTS	*9-10*
8	TROUBLE SHOOTING TABLES AND TREES	11-14
9	WARRANTY & SERVICE	15
10	REFRIGERATION DIAGRAM	16
11	TIMING DIAGRAM	18-19
12	I/O UTILITY LOCATION(IF APPLICABLE)	LAST
13	ELECTRICAL DIAGRAM	LAST
14	TEST CERTIFICATE	LAST
15	CLAIM FORM	LAST
16	SERVICE RECORD FORM	LAST
	Technical depth *as italicized* page may be limited to dealer use only.	Noted

1. INTRODUCTION:

Thank you for choosing our KOLDTECH product. With over 30 years of experience in refrigeration manufacturing we are confident that our product will provide you with years of trouble-free operation. Our products are fully engineered to be amongst the best in the industry. We also continually improve our product designs to ensure they continue to take advantage of the latest in refrigeration design. Every unit is fully tested in our calibrated testing laboratory prior to leaving our factory.

As with other precision equipment, proper care and operation will ensure years of trouble-free service. It is essential that you spend time reading this manual before operating the machine, to familiarize yourself with our product and safety procedures. Keep the manual where end-user could see and locate.

We thank you again for choosing KOLDTECH . If you have any further questions please feel free to call the dealer from whom you purchased the unit. Our address and telephone number can be found under the "Service and Repair" information section.

2. INSTALLATION AND START UP

The following procedure should be followed for trouble free installation:

2.1 **Uncrating:** While unpacking, take note of any damage to the unit. If damage is found do not discard the packing materials and notify your dealer, or the freight company a.s.a.p. Do not proceed to install the unit.

2.2 **Handling Issue**:

2.2.1 Precaution has been taken to ship the unit in an upright position. If the unit is tilted during transit lubricating oil may shift from the reservoir, and operating the unit may cause excessive wear or damage to the compressor's moving parts. It is recommended that the unit be left standing for 48 hours before operation.

2.2.2 Inspect and clear away any packing material that may be used to secure the unit during transit.

2.3 **Installation**:

2.3.1 Install the unit in a dry, well-ventilated place away from heat sources or any vibration.

Ideally for optimum performance we recommend installation in air-conditioned premises. In the event of high relative humidity, condensation may form on the cabinet. This will not impact on the

ability of the cabinet to maintain internal temperature. Should ambient temperature exceed 40°C we cannot guarantee the maintenance of internal temperature to required standards.

2.3.2 The unit should be set on a level and firm surface.

2.4 **Draining**: Special models may require drain pipe for condensate water, End-user should well explore from specification sheet before plugging in and self prepare of drain pipe as appropriate.

2.5 **Ventilation**: ventilating grills or louvers must not be obstructed for proper operation.

2.6 **Electrical Work Preparation**:

2.6.1 For safety reasons, the unit must be properly earthed. Check and make sure that the outlet is properly grounded. If a grounded plug is not available, a separate earth ground must be installed to prevent any electrical hazard. A properly rated circuit breaker should be installed to the supply outlet. Check for proper supply voltage before plugging in the unit. Please refer to voltage requirements on the nameplate of the unit.

2.6.2 Plug the unit into the wall outlet. Turn the unit on using the on/off switch.

2.7 **Starting**: After turning on the unit for the first time, if there is any unusual odour, heat, smoke or vibration immediately turn off and unplug the unit and call for a service technician. The unit should be closely monitored during the first hour of operation.

2.8 **Product Loading:** The thermostat is set at the factory for optimum operating temperature. Time taken to attain the operating temperature depends on the temperature of the food being loaded, the frequency of the door opening, ambient temperature etc. The unit should reach operating temperature during the first two hours of operation

2.9 **Machine Performance**: To prevent compressor damage, the unit is equipped with a Time Delay Circuit, which shall activate the compressor within 3 minutes after turning on the power or after restarting.

2.10 **Defrosting**: Defrosting the circuit is set from the factory for optimum operation. Do not attempt to alter the setting.

PLS NOTE do not disassemble the unit. Any service performed by parties other than our authorized may void the warranty.

3. PRODUCT CLEANING

3.1 **CLEANING** Stainless Steel surface, P.V.C. and Display Glass: Users can wash by lukewarm soapy water (or recommended cleaner) and, later, thoroughly rinses or wiping all surfaces with water or moistened clothes respectively. Finally, polish with dry soft cloth.

3.2 Note: Do not use solvents or other aggressive liquids for cleaning e.g. with mixture of chlorine or detergent etc. Do not use wire brush, steel wool or grainy –wiping pad such as Scotbrite-pad-grain.

4. MAINTENANCE

4.1 Observe safety practice by disconnecting all electrical supply before performing any kind of maintenance.

4.2 Do not use sharp instruments or cleaning agents on the unit. Clean (interior and exterior surfaces) using a damp cloth and warm water. Food particles and spillage should be removed as soon as possible to avoid build-up and odour.

4.3 To ensure efficiency and reliability it is important that the condenser coil be kept clear of accumulated dirt and duct. It is recommended to use a non-metallic brush, vacuum cleaner or air blower to dislodge dust from the condenser fins. The frequency of cleaning depends on the amount of dust in the surrounding area of the installation. **The condenser should be inspected and cleaned at least every month.**

4.4 Do not expose any electrical components to moisture or water. If the unit gets wet, turn it off and unplug it from the wall outlet immediately. Do not turn it on again until the unit is completely dry or after inspection by a qualified service technician.

4.5 Should the unit be left unused for an extended period, all food items should be removed. The interior surface and shelves should be cleaned thoroughly. Unplug the unit from the power source and leave the doors slightly opened.

Recommended Maintenance Schedule

Maintenance List	Frequency		
	Daily	Weekly	Monthly
Clean interior and exterior surfaces	X		
Check operating temperature	X		
Check control panel alarm	X		
Check compressor for vibration		X	
Check compressor temperature		X	
Check condenser fan		X	
Clean condenser coil			X

5. TEMPERATURE SETTING:

5.1 Your KOLDTECH product is equipped with an electronic thermostat with off cycle designed for refrigeration applications at normal temperature. It provides a relay output to drive the compressor and a probe input. An internal timer manages the off cycle defrost.

Tips: Recommended preset temperatures for **specialized use**.

Flowers:	+4°C to +8° C
Confectionery (Candy):	+14°C to +18°C
Seafood:	-1°C to +1°C
Meat:	-2°C to +1°C
Cakes:	+7°C to +10°C

(Consult factory when needed, self-adjustment may void the given warranty)

5.2 Front Panel Commands

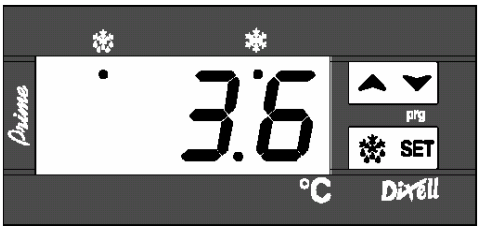

SET: refers to display target set point, in programming mode it selects a parameter or confirms an operation.

(DEF) Presses for more 2 seconds to start a manual defrost.

(UP) Press to see the maximum stored temperature.

(DOWN) Press to see the minimum stored temperature.

Key Combinations:

+ Lock and unlock the keyboard.

SET + **To enter in programming mode.**

SET + To return to the room temperature display.

- **Use of LEDS**

Each LED function is described in the following table

LED	MODE	FUNCTION
❄	ON	Compressor enabled
❄	Flashing	-Programming Phase (flashing with ❄) - Anti-short cycle delay enabled
❄	ON	Defrost enabled
❄	Flashing	- Programming Phase (flashing with ❄) - Drip time in progress

5.3 Changing the Set Point

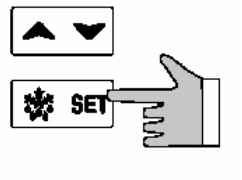

1. Press the SET key for more than 2 seconds to change the Set point value.
2. The value of the set point will be displayed and the ❄ LED starts blinking.
3. To change the Set value, pushing the ▲ or ▼ arrows within 10 sec.
4. To memorize the new set point value, pressing the SET keys again or waits 15 sec.

5.4 Alarm Signals

Display	Cause	Output
"EE"	Data or memory failure	
"P1"	Room probe failure	Output according to par. "Con" and "COF"
"HA"	Maximum temp. alarm	Output unchanged.
"LA"	Minimum temp. alarm	Output unchanged.
"EA"	External alarm	Output unchanged.
"CA"	Serious external alarm	Output OFF.

Note:

The setting of operating temperature (and defrost for freezer) is already factory set. End-user self- adjustment may void the given warranty unless consult the authorized.

(The parameter setting table, herewith given, is for the purpose of the reference of the DEALER'S service or authorized competent service technician only.)

6. ASSEMBLY DRAWING

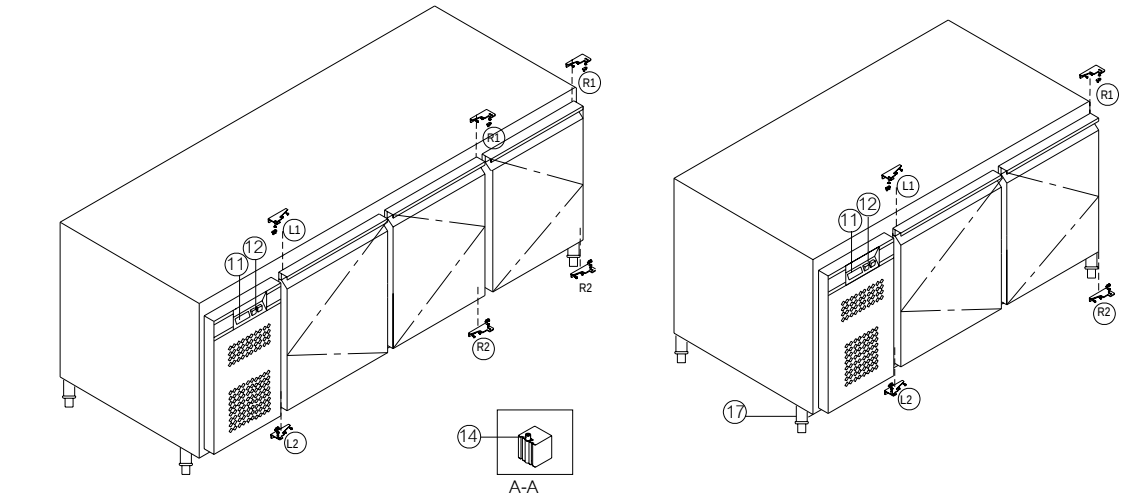

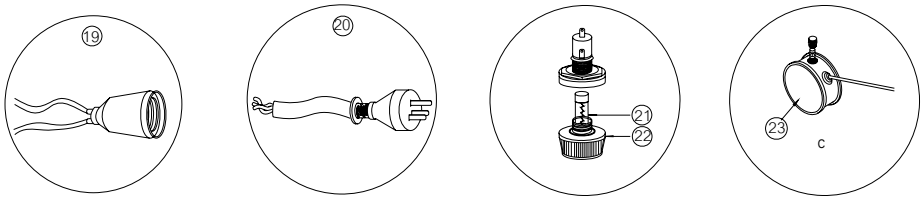

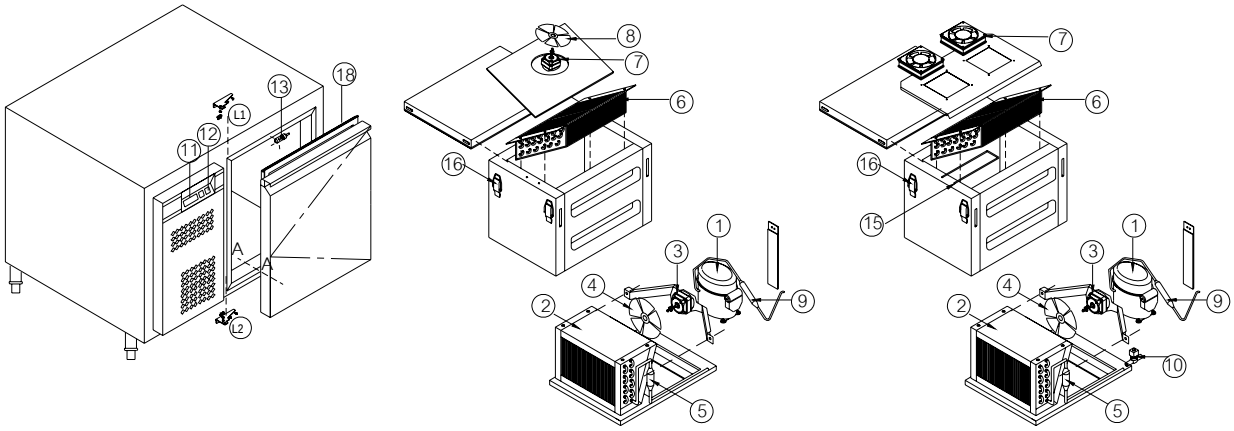

7. RECOMMENDED SPARE PARTS OF KOLDTECH PRODUCT

7.1	DESCRIPTION ☑ refers : standard equipped spec. VOLTAGE ☑ 220 Volt ☐ (others.) Volt FREQUENCY ☑ 50 Cycle ☐ 60 Cycle	REFRIGERATOR			
		GN2-108-1D	GN1-143-1D	GN1-188-3D	
ITEM		GN1-143-2D	GN1B-143-2D	GN-2-183-2D	**GN2-248-3D**
1	COMPRESSOR	1175004	1175004	1175006	1114459
2	CONDENSER COIL	254119	254119	254119	254119
3	CONDENSER FAN MOTOR	1012910	1012910	1012910	1012910
4	CONDENSER FAN BLADE	10095S	10095S	10095S	10095S
5	LIQUID FILTER DRIER	13402	13402	13402	13402
6	EVAPORATOR COIL	264129	264129	264129	265129
7	EVAPORATOR FAN MOTOR	1012910	1012910	1012910	I1009119
8	EVAPORATOR FAN BLADE	10085	10085	10085	-
9	ACCUMULATOR	13510	13510	13510	13510
10	SOLENOIL VALVE	-	-	-	-
11	DIGITAL CONTROL	0874020	0874020	0874020	0874020
12	SQUARE LIGHT SWITCH	I099105	I099105	I099105	I099105
13	LAMP	098151	098151	098151	098151
14	HEATER CABLE	I128500	I128500	I128150	I128150
15	HEATER F46	-	-	-	-
16	DRAWER -TITE ACTION CATCHES	008332	008332	008332	008332
17	LEG	091021	091021	091021	091021
18	RUBBER DOOR GASKET	0643014	0643014	0643014	0643014
19	LAMP SOCKET	098914	098914	098914	098914
20	POWER CORD	*0946701	*0946701	*0946701	*0946701
		**0946702	**0946702	**0946702	**0946702
		***0946206	***0946206	***0946206	***0946206
21	FUSE	099115	099115	099115	099115
22	FUSE BOX	09915	09915	09915	09915
23	PVC BOX	073840	073840	073840	073840
L1	TOP HINGES	181150	181150	181150	181150
R1	TOP HINGES	181152	181152	181152	181152
L2	BOTTOM HINGES	181151	181151	181140	181151
R2	BOTTOM HINGES	181153	181153	181141	181153

7.2	DESCRIPTION ☑ refers : standard equipped spec. VOLTAGE ☑ 220 Volt ☐ (others.) Volt FREQUENCY ☑ 50 Cycle ☐ 60 Cycle	FREEZER			
ITEM		GN2-108-1D	GN-2-183-2D	GN1-188-3D	GN2-248-3D
		GN1-143-1D	GN1-143-2D	GN1B-143-2D	GN2-183-2D
1	COMPRESSOR	1112428	1112428	1112428	1112428
2	CONDENSER COIL	254119	254119	254119	254119
3	CONDENSER FAN MOTOR	1012910	1012910	1012910	1012910
4	CONDENSER FAN BLADE	10095S	10095S	10095S	10095S
5	LIQUID FILTER DRIER	13402	13402	13402	13402
6	EVAPORATOR COIL	264129	265129	265129	265129
7	EVAPORATOR FAN MOTOR	I1009119	I1009119	I1009119	I1009119
8	EVAPORATOR FAN BLAD	-	-	-	-
9	ACCUMULATOR	13510	13510	13510	13510
10	SOLENOIL VALVE	13202	13202	13202	13202
11	DIGITAL CONTROL	0874012	0874012	0874012	0874012
12	SQUARE LIGHT SWITCH	I099105	I099105	I099105	I099105
13	LAMP	098151	098151	098151	098151
14	HEATER CABLE	I128500	I128300	I128300	I128150
15	HEATER F46	I126346	I126346	I126346	I126346
16	DRAWER -TITE ACTION CATCHES	008332	008332	08332	008332
17	LEG	091021	091021	091021	091021
18	RUBBER DOOR GASKET	0643014	0643014	0643014	0643014
19	LAMP SOCKET	098914	098914	098914	098914
20	POWER CORD	*0946701	*0946701	*0946701	*0946701
		**0946702	**0946702	**0946702	**0946702
		***0946206	***0946206	***0946206	***0946206
21	FUSE	099115	099115	099115	099115
22	FUSE BOX	09915	09915	09915	09915
23	PVC BOX	073840	073840	073840	073840
L1	TOP HINGES	181150	181150	181150	181150
R1	TOP HINGES	181152	181152	181152	181152
L2	BOTTOM HINGES	181151	181151	181140	181151
R2	BOTTOM HINGES	181153	181153	181141	181153

* **STANDARD**

** FOR HONGKONG&SINGAPORE

*** FOR AUSTRALIA

8. TROUBLE SHOOTING TABLE AND TROUBLE SHOOTING TREES

Symptoms	Possible Cause	Actions
Compressor is not run	1. Main switch is disconnected	1. Close switch properly.
	2. Fuses are blown.	2. Check electrical circuit and motor winding for shorted or grounded. Investigate for possible overloading. Replace fuse after fault is re-corrected.
	3. Thermal overload is tripped.	3. Overload is automatically reset. Check unit closely when unit resumes normal.
	4. Magnetic contactor /coil is out of order	4. Repair or replace.
	5. System shut down by safety devices.	5. Determine type and cause of shutdown and correct it before resetting safety switch.
	6. Liquid line (or solenoid valve) is not open.	6. Check TXV, (Repair or replace coil.)
	7. Compressor Motor drive.	7. Check motor if opens windings, short turn or burnt and disconnected.
	8. Loosened wiring.	8. Check all wires termination. Tighten all the loosened screws.
	9. (of 3 Phase system), Phase may be lost.	9. Test all conductors continuity.
Compressor is unusually sounded or vibrated	1. Liquid refrigerant returns into crankcase.	1. Check setting of expansion valves.
	2. Refrigerant Pipe is not well erected	2. Provide proper fastener
	3. Compressor mechanism loosened.	3. Repair.
	4. Internal balance springs or Neoprene choke are broken	4. Replace.
High discharge pressure	1. Condensation fail	1. Rectify cause of fails
	2. System is overcharged refrigerant.	2. Remove the excessive
	3. Fan is off	3. Check electrical circuit.
	4. Condenser fins are dusty	4. Clean.
Low discharge	1. Compressor valve is damage	1. Check compression ratio or open it.
	2. Insufficient refrigerant in system.	2. Check leaking and recharge refrigerant

pressure	3. Stop valve is yet closed.	3. Open stop valve properly.
High suction pressure	1. Excessive chilled product. 2. Expansion valve overfeeding.	1. Chilled volume to specification 2. Check remote bulb. Regulate superheat.
Low suction pressure	1. Lack of refrigerant. 2. Evaporator is full of ice 3. Clogged liquid line. 4. Expansion valve malfunctioning. 5. Improper TXV.	1. Check leaking and fix. 2. Defrost system does not work. 3. Replace Stainer-Drier 4. Check and reset for proper superheat. 5. Check for proper sizing.
Compressor loses oil	1. Leaking of refrigerant. 2. Loosened cylinder ring 3. Refrigerant flood back. 4. Pipe sizing or trapping is not correct	1. Check leaking and recharge refrigerant. 2. Replace compressor. 3. Maintain proper superheat at compressor. 4. Re-correct piping.
Compressor thermal protector switch is open.	1. Operating beyond design conditions. 2. Condenser fins are overly dirty 3. Overcharged refrigerant	1. Tuning facilities to the allowable limits. 2. Clean Fin coil. 3. Release the excessive

Evaporator Trouble shooting

Symptoms	Possible Causes	Actions
Fan(s) is not turned.	1. Main switch is open. 2. Fuses are blown. 3. Motor is out of order. 4. Defective Timer or defrost thermostat. 5. Unit is in defrosts cycle. 6. Coil is not cooled down enough to reset thermostat.	1. Close switch. 2. Replace fuses. Check cause of short circuits or overload conditions. 3. Replace motor. 4. Replace defective component. 5. Wait until resuming 6. Adjust fan delay setting or wait until resuming.
Room temperature is too high.	1. Room temp. is overly set. 2. Superheat is too high. 3. Refrigerant is shortage. 4. Evap. Coil is highly ice accumulation.	1. Properly tune thermostat. 2. Adjust thermal expansion valve. 3. Check, fix leaking, and Recharge ref. 4. Do Manually defrost and check defrost control setting

Ice is accumulating on ceiling around evaporator and/or on fan guards venturi or blades.	1. Defrost duration is too long. 2. Fan delay does not activate fans after defrost period. 3. Defrost thermostat or timer is out of order 4. Frequently Defrosting action	1. Adjust defrost termination value 2. Thermostat is not defrost, or adjusted properly. 3. Replace defective component. 4. Reduce number of defrost cycle set.
Evap.Coil is not cleared of frost during defrost cycle.	1. During defrosting, Temp of Evap. coil is lower than freezing temp. 2. Cycle of defrost is not enough 3. Defrost cycle too short. 4. Defective Timer or defrost thermostat.	1. Check heater if operation is normal. 2. Adjust Timer for more defrost cycles. 3. Adjust defrost thermostat or Timer for longer cycle. 4. Replace defect component.
Ice accumulating in drain pan	1. Condensate (pan) heater is out of order. 2. Drainpipe is clogged of ice. 3. Drain heater is out of order. 4. Timer/thermostat is out of order	1. Replace heater. 2. Clear drain line. 3. Replace heater, remove clogging 4. Replace defective component.

Troubleshooting Trees

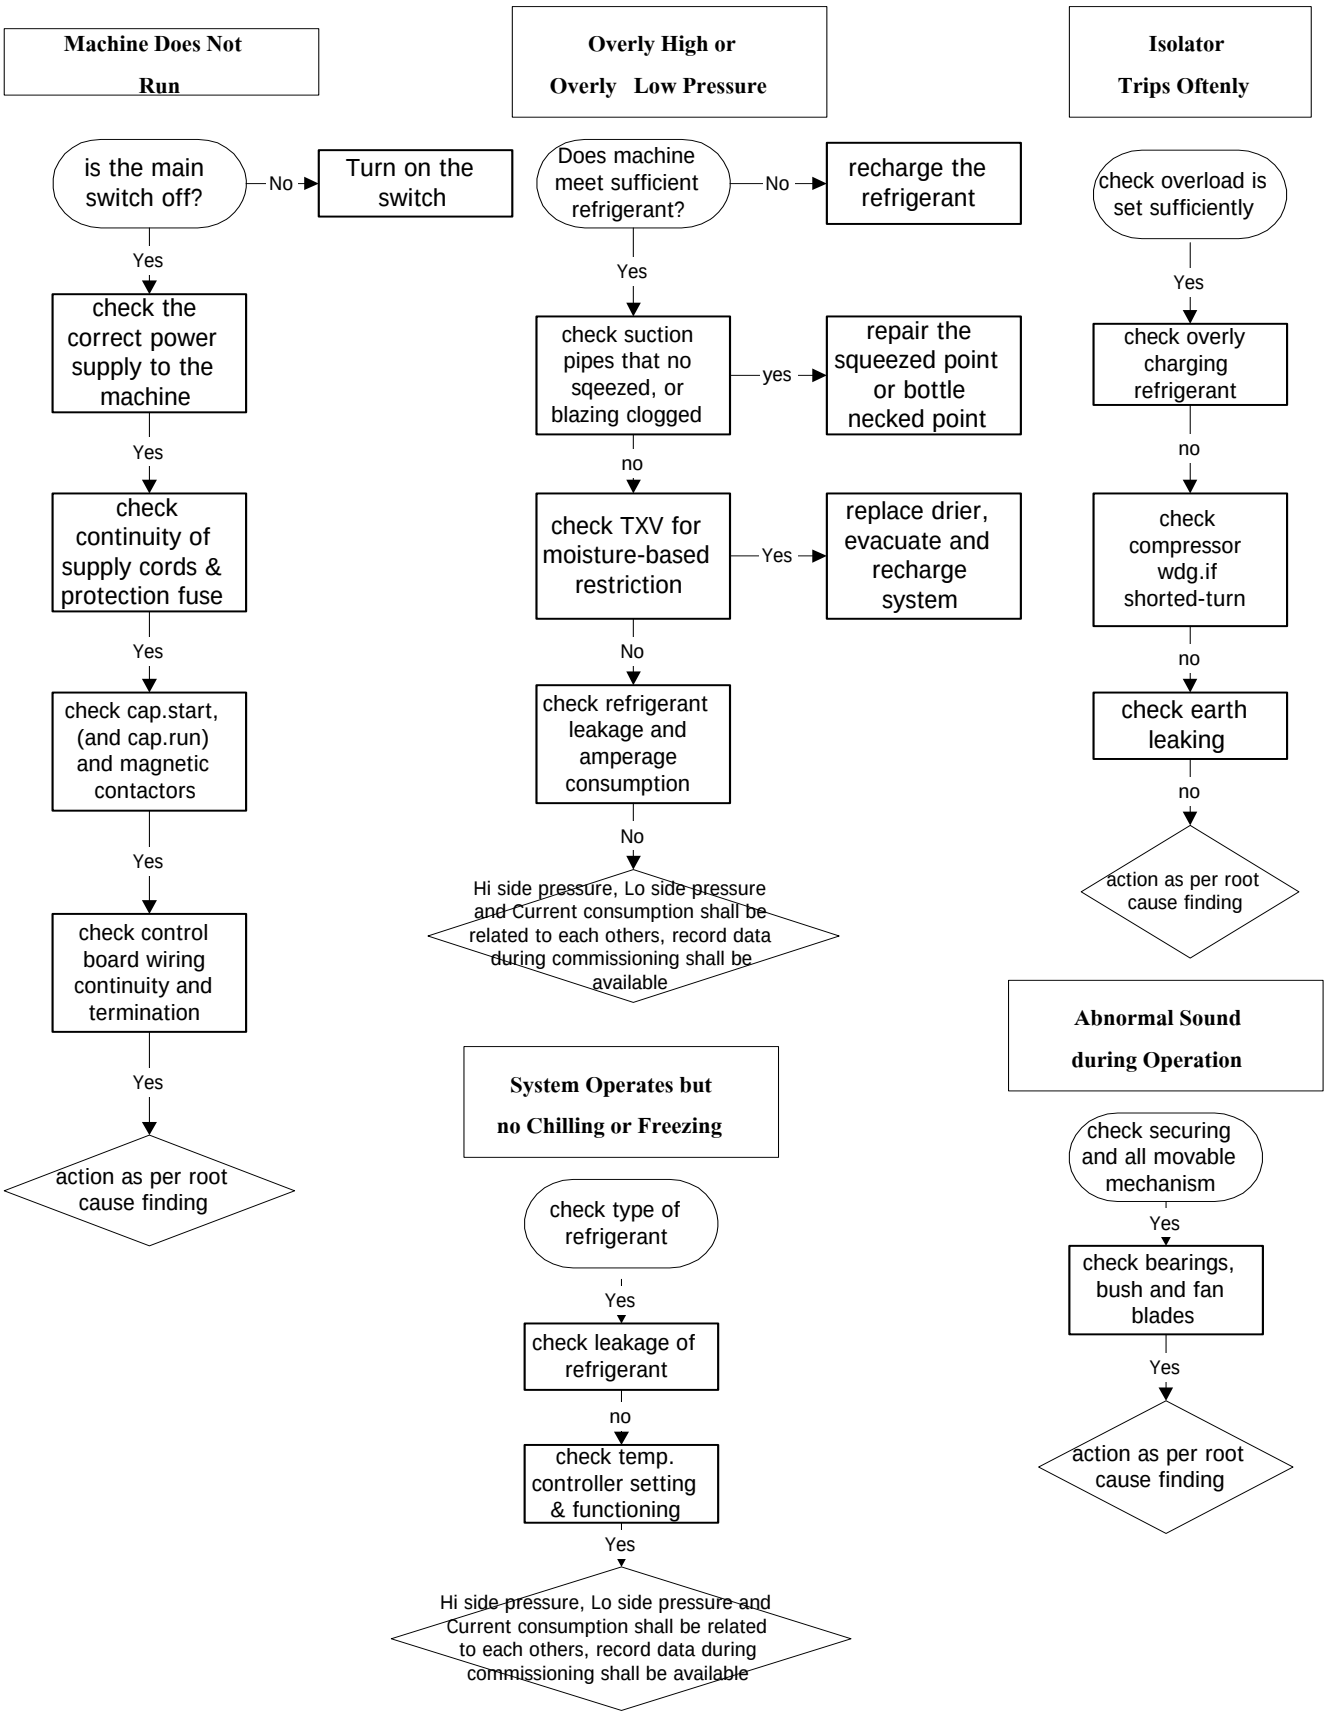
Machine Does Not Run
is the main switch off?
No
Turn on the switch
Yes
check the correct power supply to the machine
Yes
check continuity of supply cords & protection fuse
Yes
check cap.start, (and cap.run) and magnetic contactors
Yes
check control board wiring continuity and termination
Yes
action as per root cause finding
Overly High or Overly Low Pressure
Does machine meet sufficient refrigerant?
No
recharge the refrigerant
Yes
check suction pipes that no sqeezed, or blazing clogged
yes
repair the squeezed point or bottle necked point
no
check TXV for moisture-based restriction
Yes
replace drier, evacuate and recharge system
No
check refrigerant leakage and amperage consumption
No
Hi side pressure, Lo side pressure and Current consumption shall be related to each others, record data during commissioning shall be available
Isolator Trips Oftenly
check overload is set sufficiently
Yes
check overly charging refrigerant
no
check compressor wdg.if shorted-turn
no
check earth leaking
no
action as per root cause finding
System Operates but no Chilling or Freezing
check type of refrigerant
Yes
check leakage of refrigerant
no
check temp. controller setting & functioning
Yes
Hi side pressure, Lo side pressure and Current consumption shall be related to each others, record data during commissioning shall be available
Abnormal Sound during Operation
check securing and all movable mechanism
Yes
check bearings, bush and fan blades
Yes
action as per root cause finding

9. WARRANTY

9.1 KOLDTECH warrants equipment sold against defects in material and workmanship for a period of twelve (12) months from the date of installation or fifteen (15) months from date of shipment (whichever comes first). Access to warranty is conditional on the equipment being correctly installed, cared for and operated under normal conditions

9.2 The warranty does not cover:

9.2.1 Any consequential loss, damages or expenses directly or indirectly arising from use or attempted use or from any other cause.

9.2.2 Any part of the product which has been subject to misuse, neglect, alteration, incorrect installation, accident, use of inappropriate chemicals, flooding, fire or acts of God.

9.2.3 Damage caused during transportation.

9.2.4 Breakage of glass, bulbs, lamps or plastic components or the replacement of gaskets or fluorescent tubes.

9.2.5 Penalty or additional labour costs for installation, removal or repair of the product outside normal working hours

All warranty parts requested will be charged to the customer's account unless a warranty claim is approved. Standard credit policies will be applied.

9.3 Warranty Procedures

If your KOLDTECH product is not working while still under warranty and has not been subject to improper use or treatment, follow the procedure listed below to obtain repairs:

- Locate the rating plate sticker on your KOLDTECH product to enable you to complete the details on the Warranty Request Form.
- Complete the form with all requested details and faxes a copy to the number shown, along with proof of purchase of the product.

Manufacturer and the authorized reserve the right to reject warranty calls where circumstances fail to meet their warranty conditions.

9.4 Parts Ordering and Service Procedures

9.4.1 Replacement Parts

Replacement parts are available as shown:

In Australia:	**In Asia, South East Asia and others:**
Tom Stoddart Pty Ltd 215 Jackson Road Sunnybank Hills Q 4109 Australia Ph: 61 7 3345 5011 Fax: 61 7 3344 6166	**To contact the nearest dealers** or by e-mail to the service department. Att: adms@welbilt-thailand.com factory@welbilt-thailand.com Ph: 66 02 316 0770 Fax: 66 037 294 181

9.4.2 Damages and Shortages

If the KOLDTECH product is damaged during transport please contact your dealer a.s.a.p.

9.4.3 Service

To arrange service on your KOLDTECH product please contact the dealers' service department

In Australia	**In Asia, South East Asia and others:**
Tom Stoddart Pty Ltd 215 Jackson Road Sunnybank Hills Q 4109 Australia Ph: 61 7 3345 5011 Fax: 61 7 3344 6166	**To contact the nearest dealers** or by e-mail to the service department. Att: adms@welbilt-thailand.com factory@welbilt-thailand.com Ph: 66 02 316 0770 Fax: 66 037 294 181

10. FUNDAMENTAL REFRIGERATION DIAGRAM

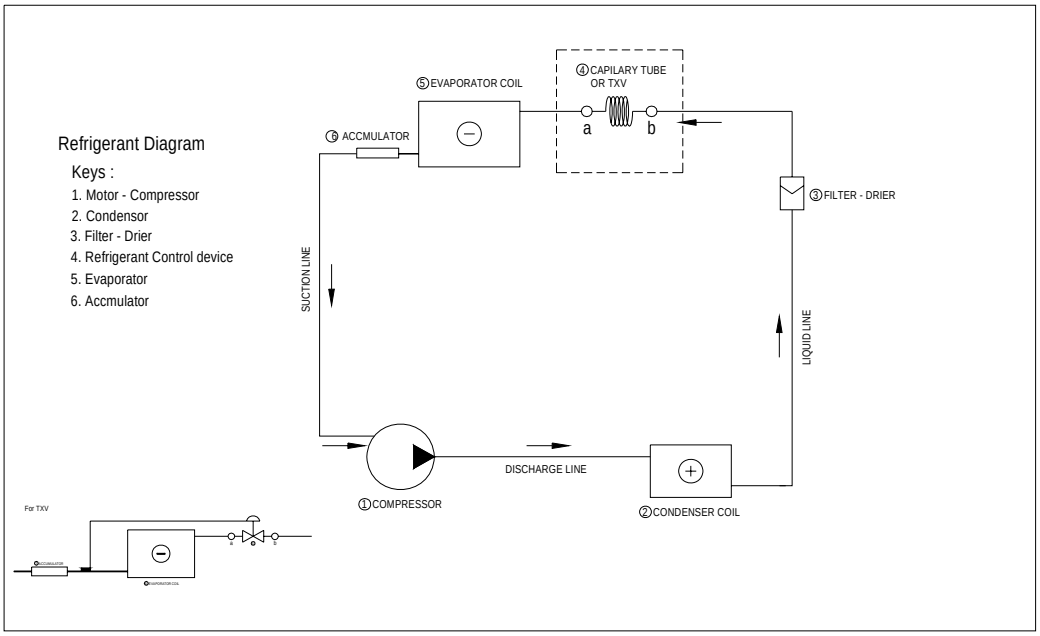

Topic	Descriptions	Locations
11	ELECTRICAL SCHEMATIC DIAGRAM	Last attaching, respectively.
12	*UTILITY INLETS/OUTLETS LAYOUT OF THIS UNIT IS N/A*	
13	COMBINATIVE TIMING DIAGRAM	
14	COPY OF TEST CERTIFICATE	
15	BLANK-CLAIM FORM	
16	BLANK-SERVICE RECORD FORM	

CAUTION	
1 : NOT TO Overloading the outlet by multisockets (one outlet one appliance)	
3. : NOT TO Spraying the unit with water	
5 : NOT TO Holding the cord when unplugging (Hold plug head is suggested)	
7 : NOT TO Having back of the unit press against cord	
9 : NOT TO Having stuff place on top of the unit	
11 : NOT TO Using wet hands whilst pluging and unplugging	
13 : NOT TO Storing flammable or explosive material, liquid, or gas inside the unit	
15 : NOT TO Using flammable spray near the unit	
17 : NOT TO Using the damaged electrical cord	
19 : NOT TO Placing glass bottle items in freezer	
21 : NOT TO Attempting to remove the unit with unproper method	
23 : NOT TO Placing movers hands under the unit when handling, to use dolly as necessary when handling	
25 : NOT TO Replugging so soon, but wait for 3 - 6 minutes allowing the system pressure balance then restart achievement	

CAUTION	
2 : NOT TO Repairing or remove without know - how	
4 : NOT TO Cleaning plug - pins by soaked cloth	
6 : NOT TO Tempering the electric cord	
8 : NOT TO Having electrical cord trapped under the unit or other machine	
10 : NOT TO Neglecting securing earthing	
12 : NOT TO Playing (Hanging) on door leave	
14 : NOT TO Storing extremely temperature sensitive stuffs eg medical, relevant researching materials	
16 : NOT TO start up the unit when having gas leakging near by, open windows (door) to firstly dilute gas density is a must	
18 : NOT TO Installing the unit exposedly to water or high moisture	
20 : NOT TO Subjectively playing (Setting) temperature(R : 3 C - 13 C, F : -20 C - 0 C)	
22 : NOT TO Touching frozen foods or frozen metal container with bare hands, it can cause cold burn	
24 : NOT TO Unplugging the unit whenever intermediate service needed	
26 : NOT TO Forgetting all of the mentioned advice	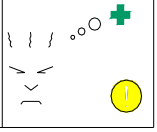

C:\Program Fires\My doc~\Suradeje\(CR)\Safety Notices\Safety Notices

REV.A : 27/10/03/SE.

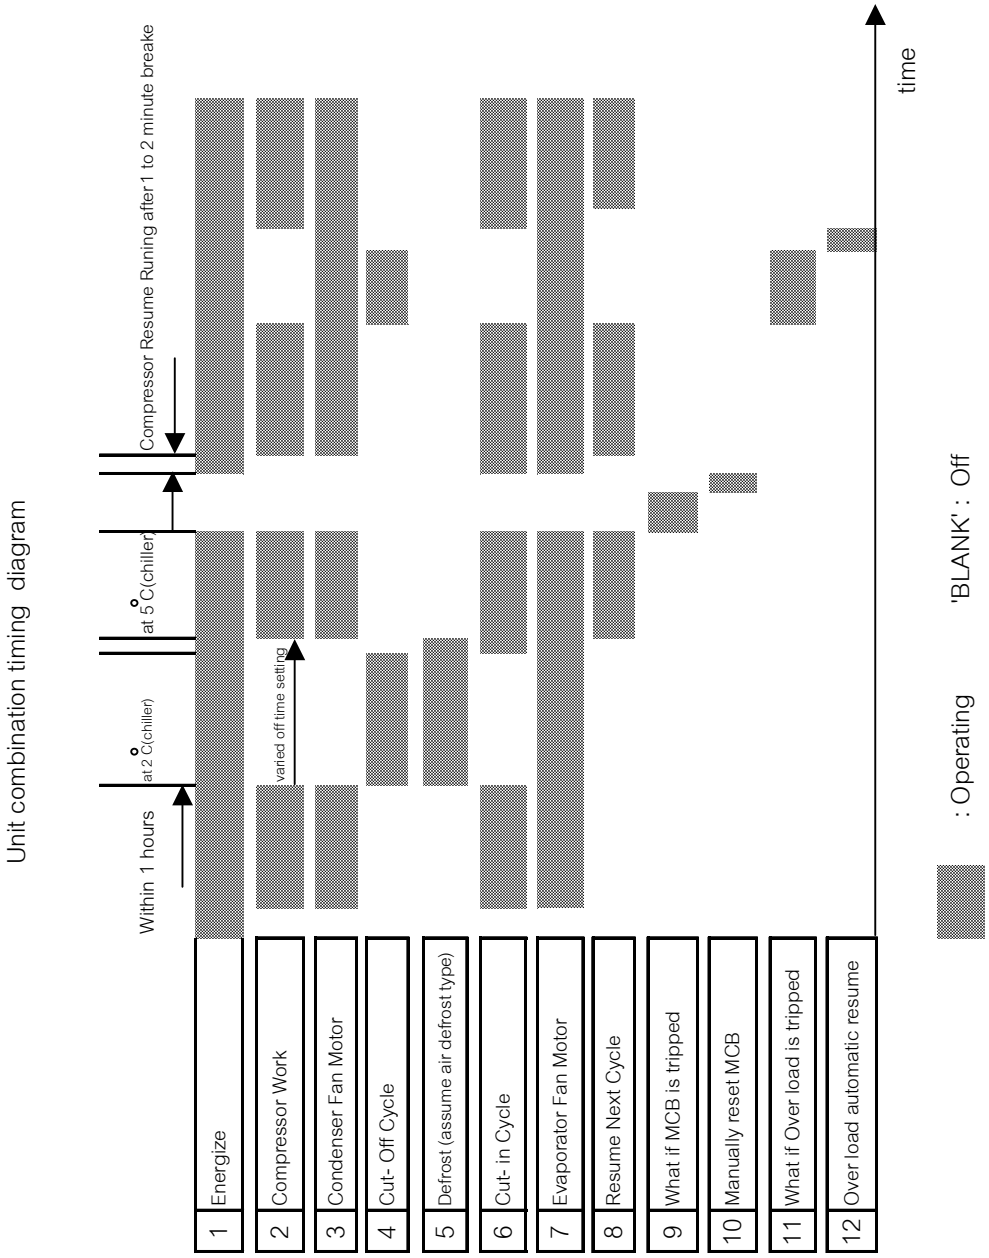
Unit combination timing diagram
Within 1 hours
at 2 °C(chiller)
varied off time setting
at 5 °C(chiller)
Compressor Resume Runing after1 to 2 minute breake
time
: Operating
'BLANK' : Off
1 Energize
2 Compressor Work
3 Condenser Fan Motor
4 Cut- Off Cycle
5 Defrost (assume air defrost type)
6 Cut- in Cycle
7 Evaporator Fan Motor
8 Resume Next Cycle
9 What if MCB is tripped
10 Manually reset MCB
11 What if Over load is tripped
12 Over load automatic resume

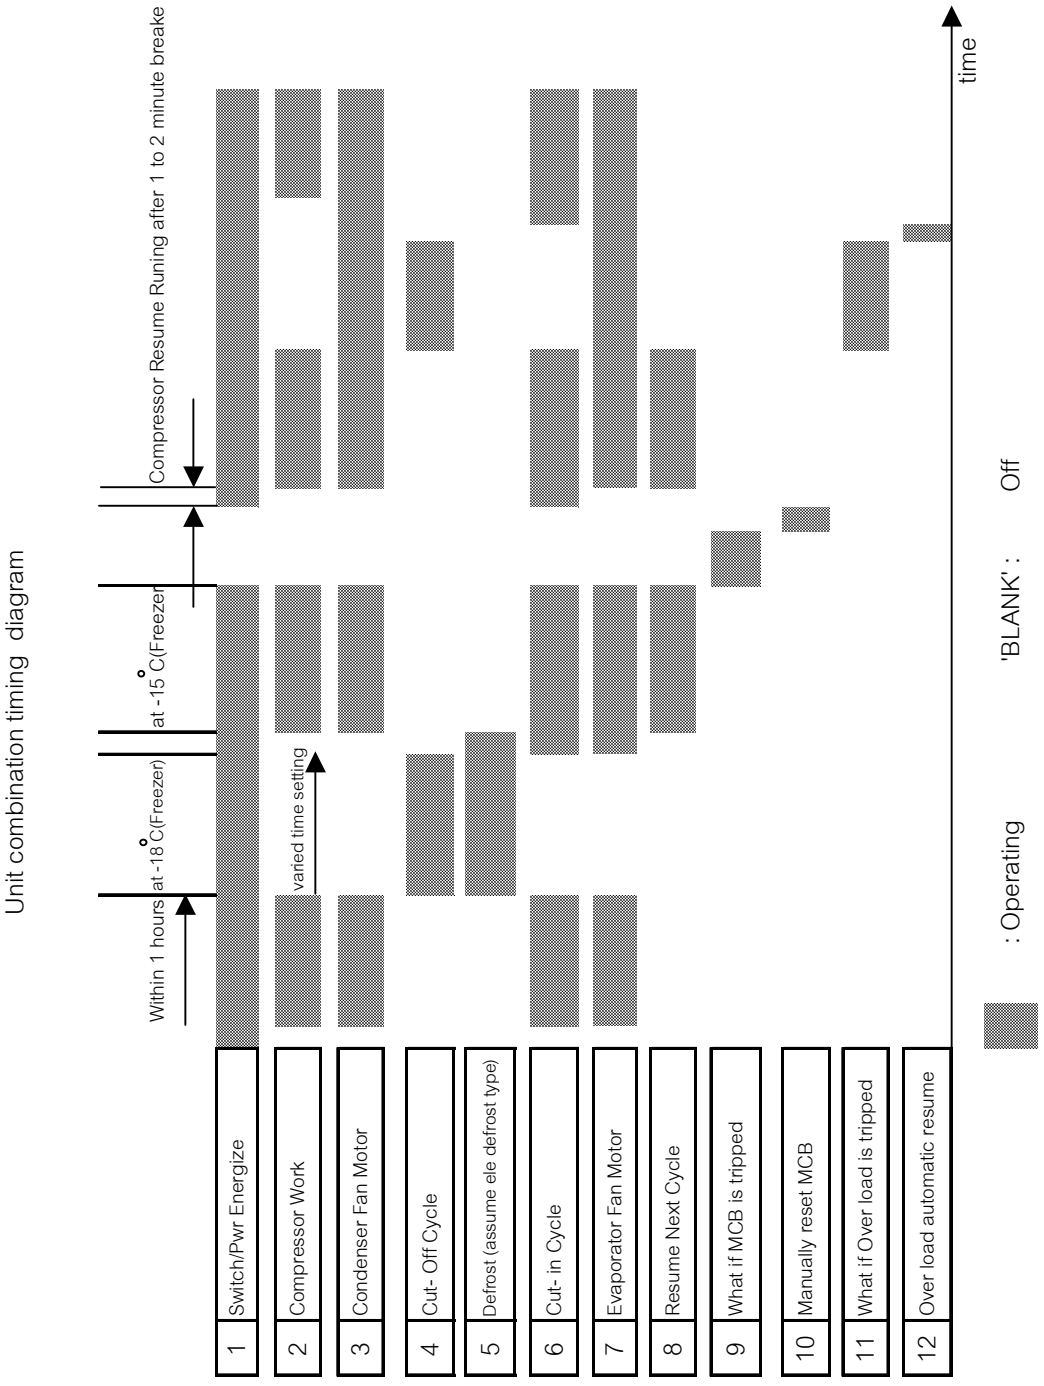
Unit combination timing diagram
Within 1 hours at -18°C(Freezer)
at -15°C(Freezer)
Compressor Resume Runing after 1 to 2 minute breake
varied time setting
1 Switch/Pwr Energize
2 Compressor Work
3 Condenser Fan Motor
4 Cut- Off Cycle
5 Defrost (assume ele defrost type)
6 Cut- in Cycle
7 Evaporator Fan Motor
8 Resume Next Cycle
9 What if MCB is tripped
10 Manually reset MCB
11 What if Over load is tripped
12 Over load automatic resume
time
: Operating
'BLANK' : Off

Controller application setting parameters Dixell XR20C for Under coundter chiller

Name	Label	Range	Original setting	Factory setting
REGULATION			°C/°F	°C
Set point	Set	LS-US	-5/0	2
Differential	Hy	0.1-25.5°C/1-255°F	2/4	3
Minimum set point	LS	-50°C-SET/-58°F-SET	-50/-58	-2
Maximum set point	US	SET-110°C/SET-230°F	110/230	5
Thermostat probe calibration	Ot	-12-12°C/-120-120°F	0	0
Evaporator probe presence	P2P	n=not present; Y=pres.	y	n
Evaporator probe calibration	OE	-12-12°C/-120-120°F	0	0
Outputs deray at start up	Ods	0-255 min	0	1
Anti short cycle delay	AC	0-50 min	1	2
Continuos cycle duration	CCt	0.0-24.0 h	0.0	0
Compressor ON time with faulty	Con	0-255 min	15	10
Compressor ON time with faulty probe	COF	0-255 min	30	5
Temperature measurement unit	CF	°C - °F	°C / °F	C
DISPLAY				
Resolution	Res	in=integer; dE=dec.point	dE/-	de
Probe displayed	Lod	P1:P2	P1	P1
DEFROST				
Defrost type	tdF	EL=el.heater; in=hot gas	-	-
Defrost termination temperatur	dtE	-50-50°C	-	-
Interval between defrost cycles	IdF	1-120 ore	8	5
(Maximum)length for defrost	MdF	0-255 min	20	30
Start defrost delay	dSd	0-99 min	0	0
Displaying during defrost	dFd	rt,it,SEt,DEF	it	DEF
MAX display delay after defrost	dAd	0-255 min	30	15
Draining time	Fdt	0-120 min	0	0
First defrost after startup	dPo	n=after IdF;y=immed.	n	n
Defrost delay after fast freezing	dAF	0-23 h e 50'	0.0	0
FANS				
Fan operating mode	Fnc	C-n,o-n,C-y,o-Y	-	-
Fan delay after defrost	Fnd	0-255 min	-	-
Fan stop temperature	FSt	-50-50°C/-58-122°F	-	-
ALARMS				
Temperature alarms configuration	ALc	rE=related to set;Ab=absolute	Ab	AB
MAXIMUM temperature alarm	ALU	Set-110.0°C;Set-230°F	110/230	15
Minimum temperature alarm	ALL	-50.0°C-Set/-58°F-Set	-50/-58	-5
Temperature alarm delay	ALd	0-255 min	15	30
Delay of temperature alarm at start up	dAO	0-23 h e 50'	1.3	6
DIGITAL INPUT				
Digital input polarity	i1P	oP=opening;Cl=closing	CL	CL
Digital input configuration	i1F	EAL=extern.alarm,bAL=lock regulat PAL=press.sw,dor=door sw dEF=defrost,LHt=disabled Htr=Cooling-heating	EAL	EAL
Digital input alarm delay	did	0-255 min	5	5
Kind of action when I1f=Bal	Nps	0=door switch,1=lock regulation,2-15=pressure switch	15	15
Compressor status with open door	odc	no,Fan=normal;CPr;FC=Compr.OFF;	no	no
Kind of probe	Pbc	Ptc;ntc	ntc/Ptc	ntc
Room probe display	dP1	-	-	-
Evaporator probe display	dP2	-	-	-
Software release	rEL	-	4.0	-
Map code	Ptb	-	-	2

Controller application setting parameters Dixell XR40C for Under coundter freezer

Name	Label	Range	Factory seting	Parameter user
REGULATION			°C/°F	°C
Set point	Set	LS-US	-5/0	-20
Differential	Hy	0.1-25.5°C/1-255°F	2/4	3
Minimum set point	LS	-50°C-SET/-58°F-SET	-50/-58	-23
Maximum set point	US	SET-110°C/SET-230°F	110/230	-15
Thermostat probe calibration	Ot	-12-12°C/-120-120°F	0	0
Evaporator probe presence	P2P	n=not present; Y=pres.	y	y
Evaporator probe calibration	OE	-12-12°C/-120-120°F	0	0
Outputs deray at start up	Ods	0-255 min	0	1
Anti short cycle delay	AC	0-50 min	1	2
Continuos cycle duration	CCt	0.0-24.0 h	0.0	0
Compressor ON time with faulty	Con	0-255 min	15	20
Compressor ON time with faulty probe	COF	0-255 min	30	5
Temperature measurement unit	CF	°C - °F	°C / °F	C
DISPLAY				
Resolution	Res	in=integer; dE=dec.point	dE/-	de
Probe displayed	Lod	P1:P2	P1	P1
DEFROST				
Defrost type	tdF	EL=el.heater; in=hot gas	EL	EL
Defrost termination temperatur	dtE	-50-50°C	8/46	30
Interval between defrost cycles	IdF	1-120 ore	6	4
(Maximum)length for defrost	MdF	0-255 min	30	30
Start defrost delay	dSd	0-99 min	0	0
Displaying during defrost	dFd	rt,it,SEt,DEF	it	DEF
MAX display delay after defrost	dAd	0-255 min	30	20
Draining time	Fdt	0-120 min	0	2
First defrost after startup	dPo	n=after IdF;y=immed.	n	n
Defrost delay after fast freezing	dAF	0-23 h e 50'	0.0	0
FANS				
Fan operating mode	Fnc	C-n,o-n,C-y,o-Y	-	-
Fan delay after defrost	Fnd	0-255 min	-	-
Fan stop temperature	FSt	-50-50°C/-58-122°F	-	-
ALARMS				
Temperature alarms configuration	ALc	rE=related to set;Ab=absolute	Ab	AB
MAXIMUM temperature alarm	ALU	Set-110.0°C;Set-230°F	110/230	-10
Minimum temperature alarm	ALL	-50.0°C-Set/-58°F-Set	-50/-58	-25
Temperature alarm delay	ALd	0-255 min	15	30
Delay of temperature alarm at start up	dAO	0-23 h e 50'	1.3	8
DIGITAL INPUT				
Digital input polarity	i1P	oP=opening;Cl=closing	CL	CL
Digital input configuration	i1F	EAL=extern.alarm,bAL=lock regulat PAL=press.sw,dor=door sw dEF=defrost,LHt=disabled Htr=Cooling-heating	EAL	EAL
Digital input alarm delay	did	0-255 min	5	5
Kind of action when I1f=Bal	Nps	0=door switch,1=lock regulation,2-15=pressure switch	15	15
Compressor status with open door	odc	no,Fan=normal;CPr;F C=Compr.OFF;	no	no
Kind of probe	Pbc	Ptc;ntc	ntc/Ptc	ntc
Room probe display	dP1	-	-	-
Evaporator probe display	dP2	-	-	-
Software release	rEL	-	4.0	-
Map code	Ptb	-	-	-

WIRING DIAGRAM UCR–BOX

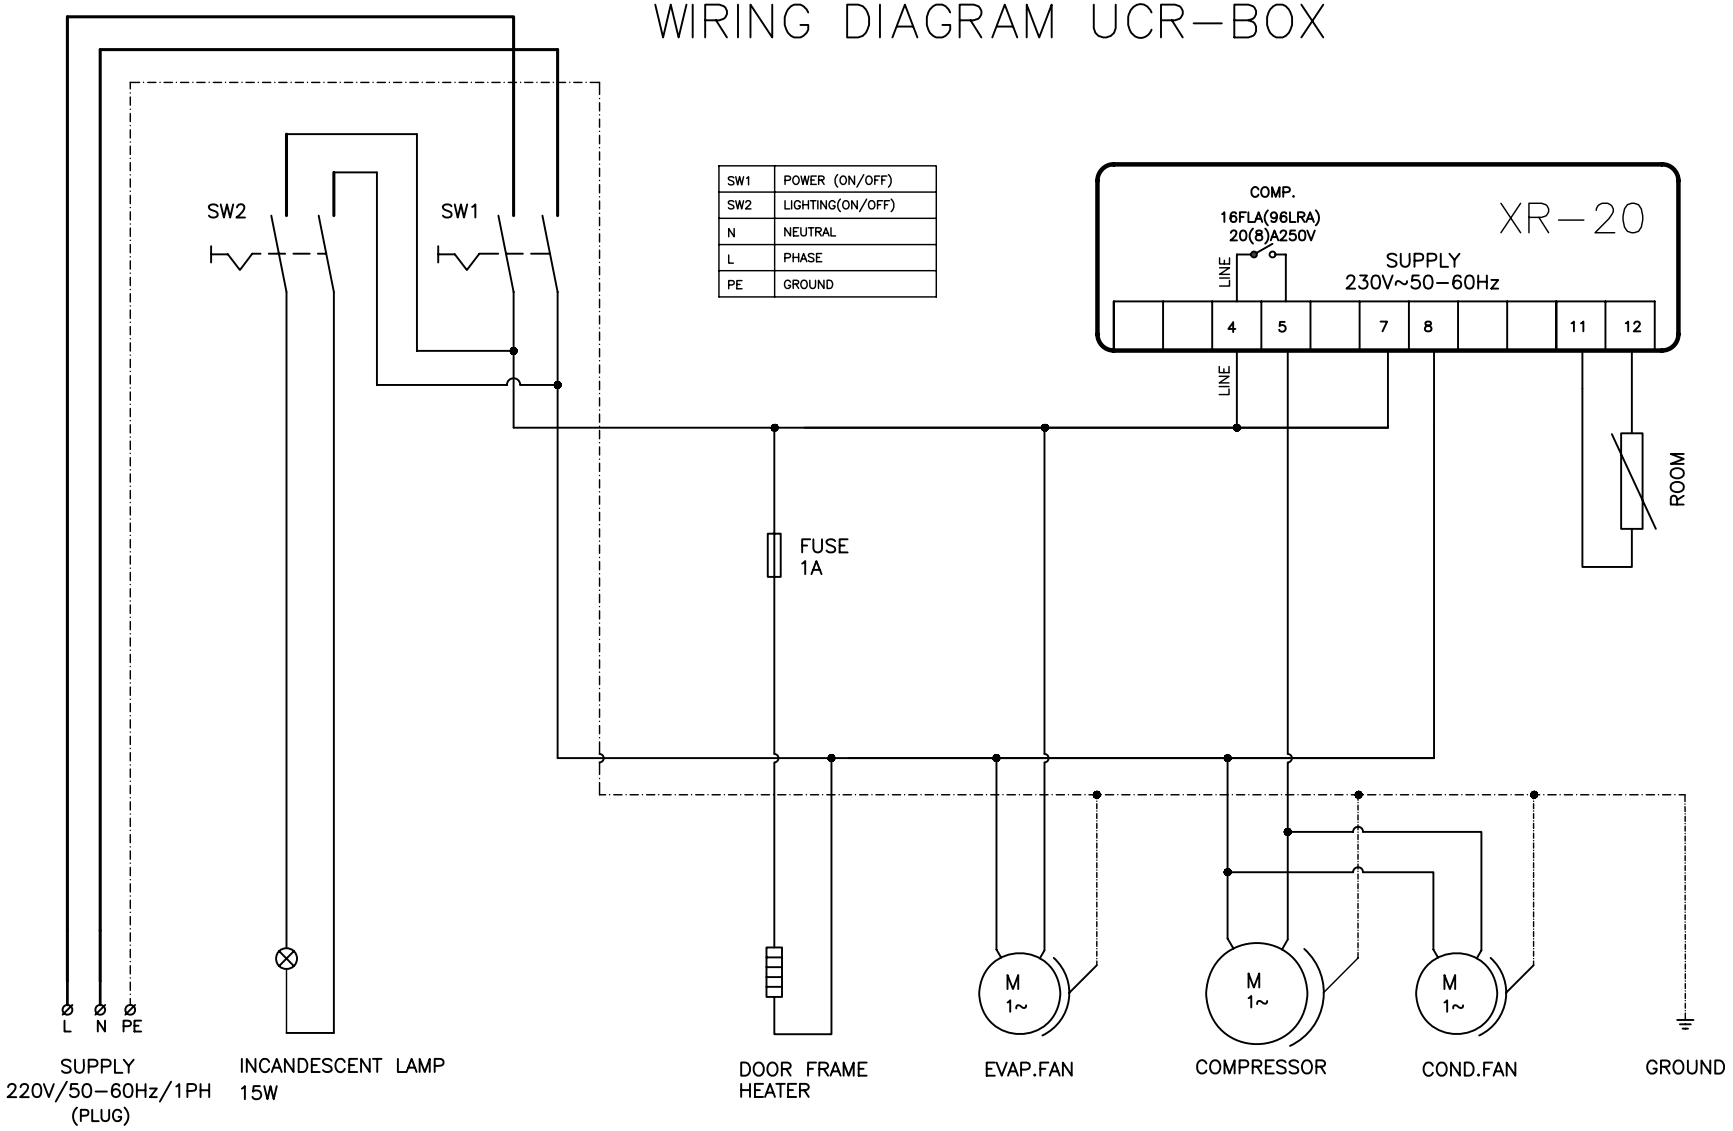

WELBILT Manufacturing(Thailand)Ltd.	UNLESS OTHERWISE NOTED	PROJECT :	DRAWN. SM.	DATE : 26/12/05	ITEM:	QTY.
	WHOLE NO. ±0.5 ANGLES ±0.5°		CHECKED.	JOB NO.	SCALE: NOT SCALE	DWG. NO. BOX
	DESIGN DIMENSIONS ARE IN mm.	PRODUCT : UNDERCOUNTER	APPROVED.	P/O NO.	PAGE NO.	REVISION:

SA1:	SA2:	MN1:	MN2:	FM/PD:	AA:

WIRING DIAGRAM UNDERCUONTER (FREEZER)

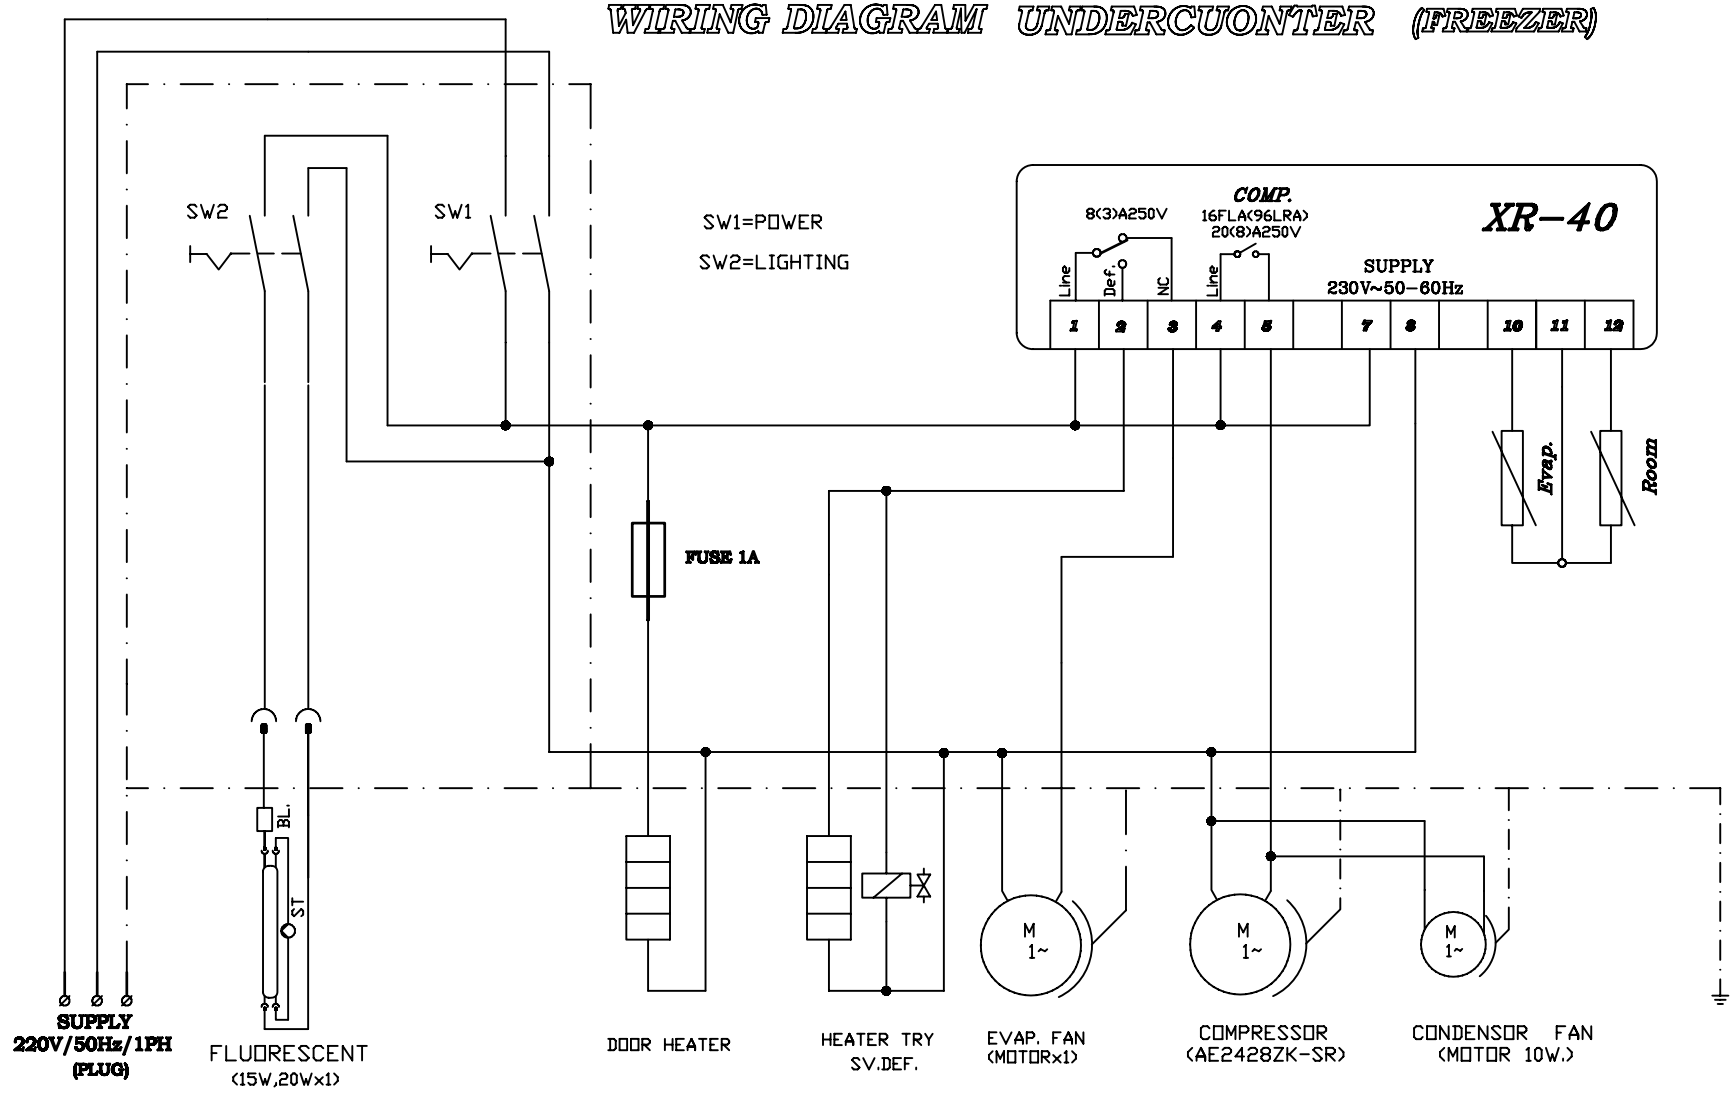

WELBILT Manufacturing(Thailand)Ltd.	UNLESS OTHERWISE NOTED	PROJECT : -	DRAWN. K. KRIANGSAK	DATE : 10-12-02	ITEM:	QTY. 1
	WHOLE NO. ±0.5 ANGLES ±0.5°		CHECKED. K. KRIANGSAK	JOB NO. -	SCALE:	DWG. NO. UCR2
	DESIGN DIMENSIONS ARE IN mm.	PRODUCT :	APPROVED.	P/O NO.	PAGE NO.	REVISION:

SA1:	SA2:	MN1:	MN2:	FM/PD:	AA: